



+

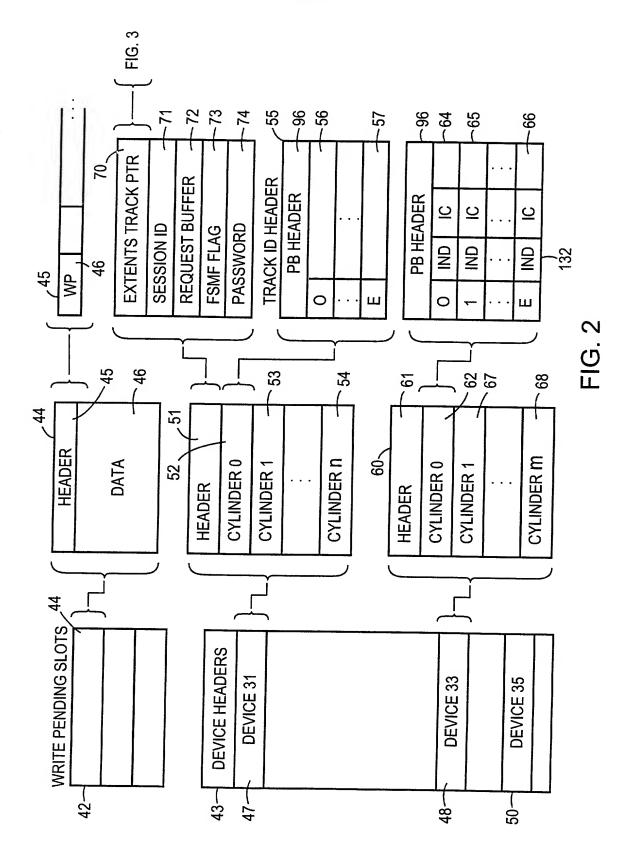

+

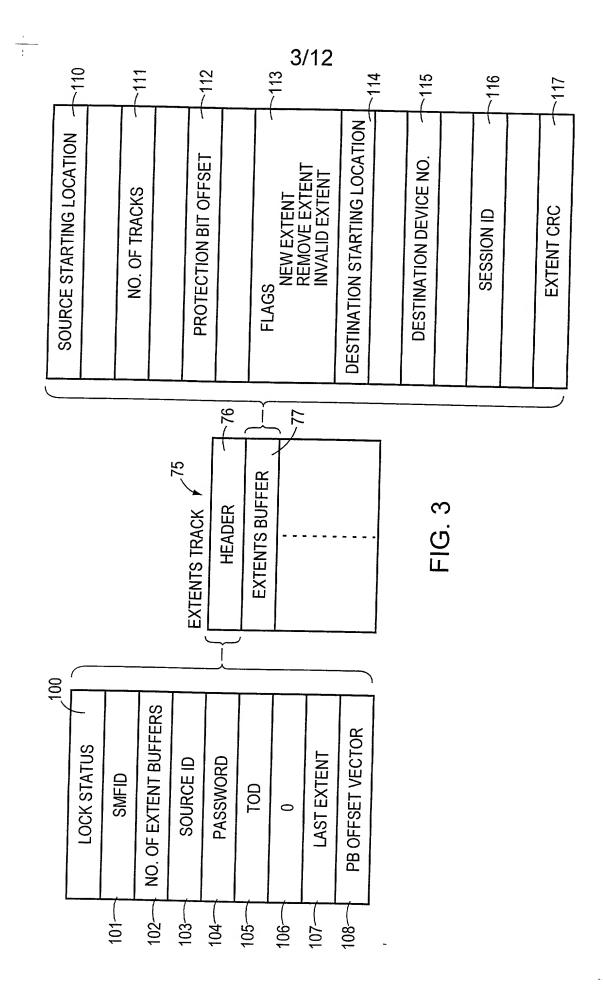

	CALL FROM DESTINATION DEVICE	CALL FROM SOURCE DEVICE
81	SOURCE DEVICE NUMBER	DESTINATION DEVICE NUMBER
82	RECORD NUMBER OF STARTING EXTENT	CYLINDER ADDRESS OF DESTINATION DEVICE
83~	RECORD NUMBER OF ENDING EXTENT	HEAD IDENTIFIER OF DESTINATION DEVICE

FIG. 4

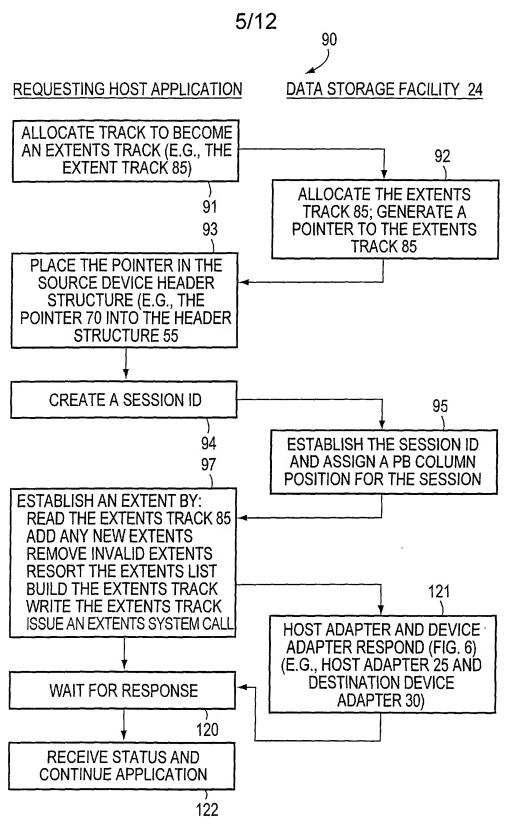


FIG. 5

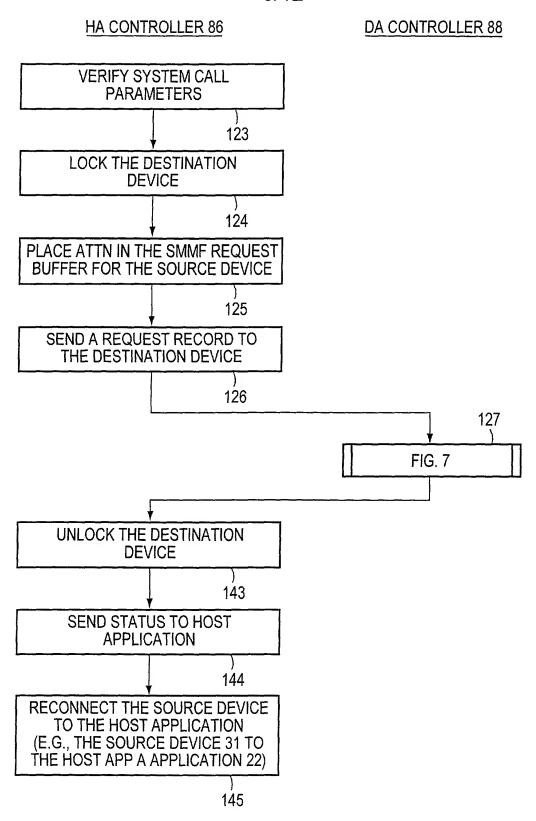


FIG. 6


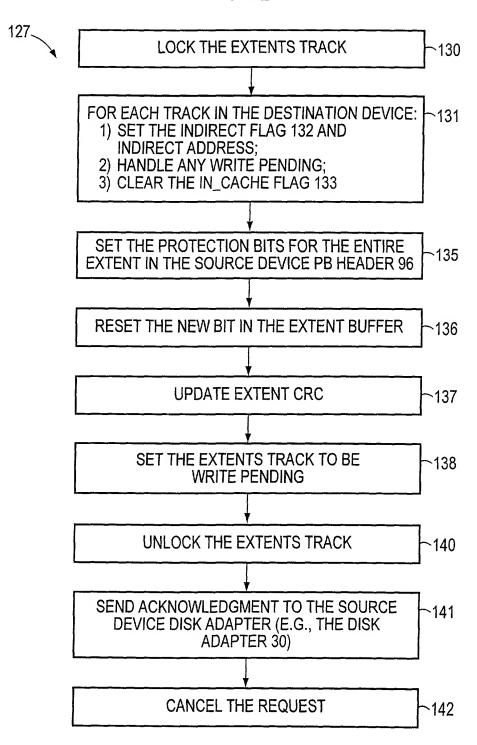


FIG. 7

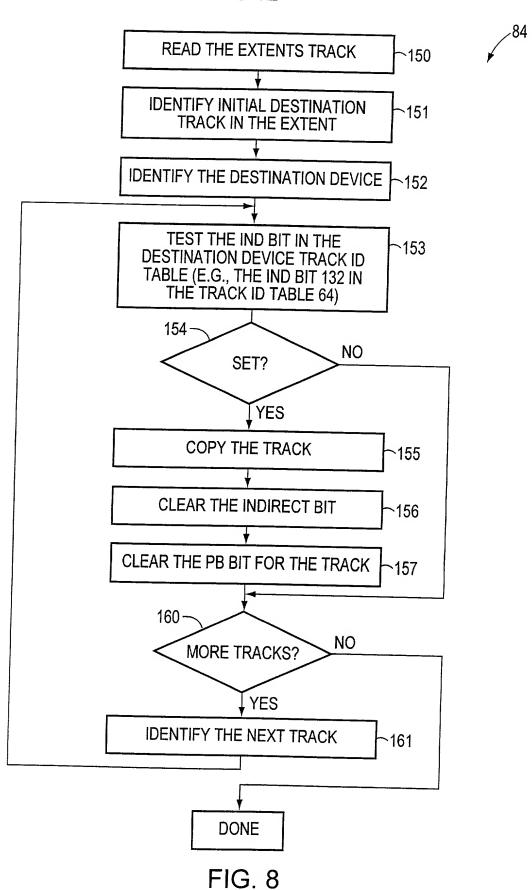

WRITE OPERATION

FROM

SOURCE HOST

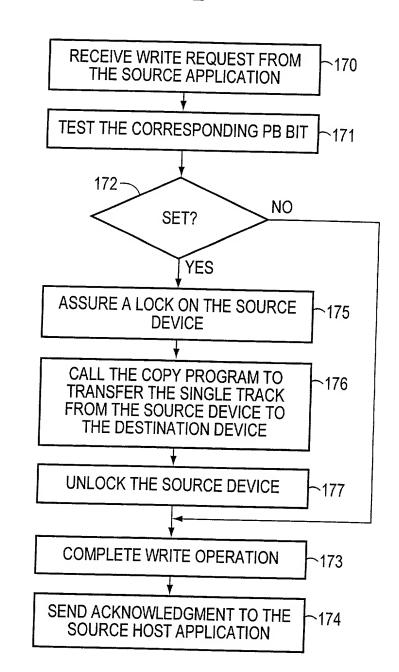


FIG. 9

## 10/12

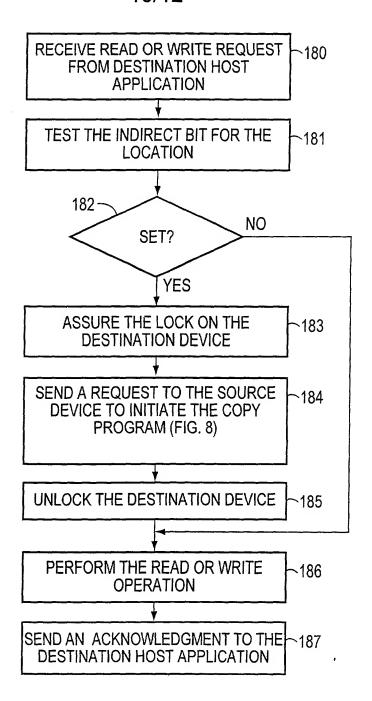


FIG. 10

The first train and the first train the first train and train and

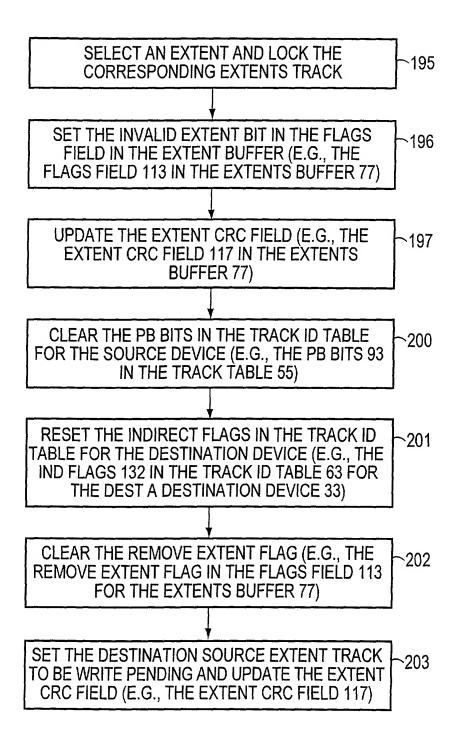


FIG. 12